

Akai Remote Adapter Instructions


RC-90 (FW:0.4) Wireless Remote Adapter

Installation: Turn off the power to the tape deck. Plug the remote adapter into the remote connector on the back of the tape deck. Plug the AC adapter into the back of the remote adapter. Now power can be turned back on. The light on the front of the remote adapter should be on. The AC adapter should be between 6 and 12 Volts DC. Current rating doesn't matter as the remote adapter consumes so little current. The connector should be a barrel connector with 2.1mm ID and 5.5mm OD.

The remote adapter can control up to 8 functions, but, not all decks support all of them. All decks support the 6 basic transport functions: Play, Stop, Fast Forward, Rewind, Pause and Record. Some decks may not support Reverse Play and/or Record Mute. Reverse Play is activated by pressing #1 on the numeric keypad and Record Mute is activated by pressing #0. On the supplied DirecTV remote REC must be double pressed before Record is activated on the deck. To initiate Record double press REC on the remote and then within about ½ second press Play, Pause or Reverse Play (#1 on the keypad).

The remote adapter can be used with any universal remote programmed for the proper Sony VCR code. To select between them there are jumpers inside the unit. Remove the two screws on the bottom of the unit and remove the top cover. Located near the front window is a jumper block with two jumpers. These jumpers labeled 1 & 2 configure what type of Sony VCR codes the unit will respond to. See the table below for a list of jumper settings.

JMP1	JMP2	Device Code	DirecTV
JMP	JMP	Beta VCR	20033
JMP	OPEN	8mm VCR	20034
OPEN	JMP	VHS VCR	20032
OPEN	OPEN	LDP	----

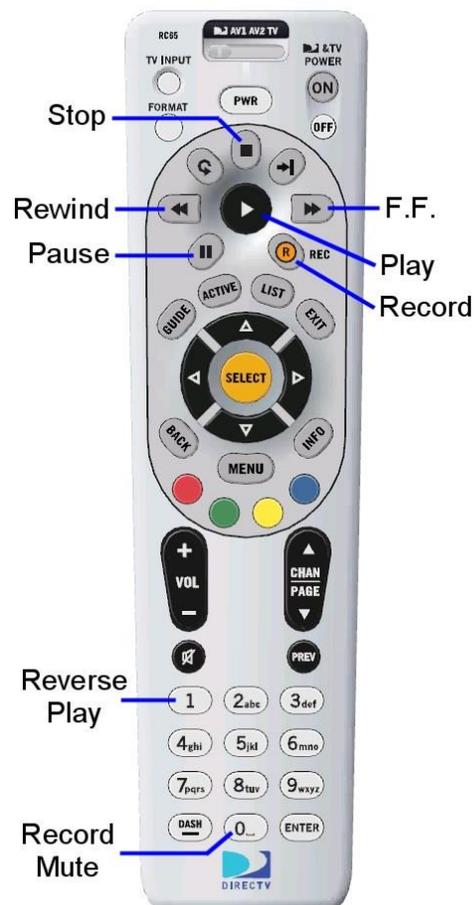

Configuring the DirecTV Remote: To program the DirecTV remote first slide the switch at the top to AV1 or AV2. Press and hold the MUTE and SELECT buttons until the green light at the top blinks twice then release. Using the number keypad enter the 5 digit device code from the table above. If done correctly the green light will blink twice after the last digit is entered. Note: On the DirecTV remote the REC button must be double pressed to activate the record function. The full manual for the DirecTV remote can be found here:

www.revoxremotes.com/Remotes/DirecTV.htm

www.R2R-Remotes.com